



# UTM-TSC

## Touch Screen Single Column Electronic Universal Testing Machine



**Video**



### Contact us

**Mikrosize Precision Instrument Co.,Ltd**

A-4035 RuiFeng Business Expo, Wuhu City, China , 241000.

Web:[www.mikrosize.com](http://www.mikrosize.com)

Email:[mikrosize@mikrosize.com](mailto:mikrosize@mikrosize.com)

Web:[www.mikrosize.com](http://www.mikrosize.com)

Email:[mikrosize@mikrosize.com](mailto:mikrosize@mikrosize.com)



# Product Features and Application

## Product Features

- Wide range of applications, powerful functions, compact structure, and easy operation.
- High measurement accuracy.
- Equipped with a high speed, low vibration, and low noise motor drive device
- Multilingual switching
- Flexible report viewing and printing functions
- Automatic return
- Multiple curve modes (optional): such as stress - strain, force - displacement, force - time, strength - time, etc.
- Multiple test mode functions: tensile, bending, compressive, flexural, tear, peel, elongation rate, and other test modes are available.
- Multiple protection devices.
- Optional large - deformation displacement tracker (for high - lift models): can meet specific test requirements.
- Optional upgrade to connect to a computer and use the advanced version of the testing software with more functions.
- Standards complied with:  
GB/T 2611、GB/T 16491、GB/T 1040、ISO 527、GB/T 8804、  
GB/T 9341、GB/T 12160、GB/T 16825




## Product Application

- Manufacturing industry: Detect the mechanical properties of various parts and raw materials in production to ensure that product quality meets design requirements.
- Material research and development: Assist researchers in understanding the mechanical properties of new materials and providing data support for material improvement and innovation.
- Research institutions: In scientific research experiments, it is used to study the mechanical behavior laws of substances and promote the development of related disciplines.



# Machine Appearance

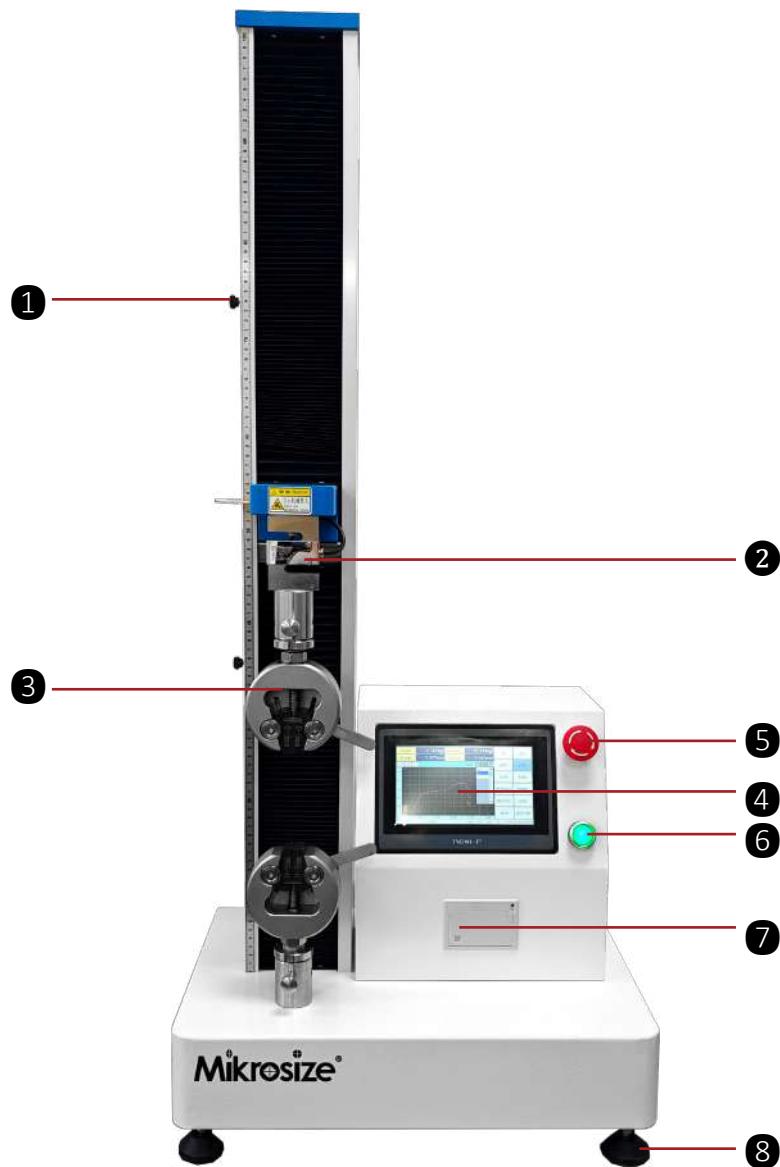


**1.Limit device 2.Load cell 3.Standard fixture  
4.Touch display screen 5.Emergency stop button 6.Switch  
7.Printer 8.Leveling feet**



**1.Power cord interface 2.Computer Wlan interface (Optional)  
3.Extensometer socket (optional)**

## Machine Details

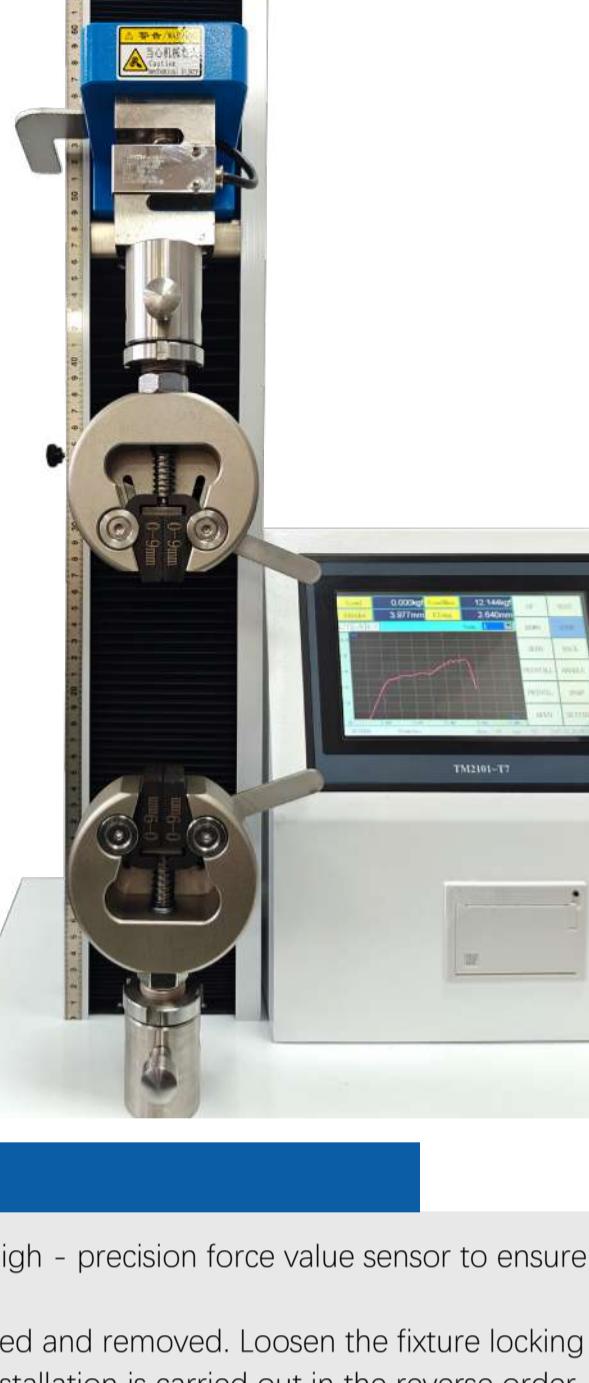

### Sensor

- This device is equipped with a high - precision force value sensor to ensure the accuracy of experimental data.
- The fixture can be quickly installed and removed. Loosen the fixture locking nut and pull out the fixture pin to remove the fixture. Installation is carried out in the reverse order.
- This device can be adapted to a variety of fixtures to meet the requirements of different experiments.



### Limit Device


- The device is equipped with upper and lower limit devices to prevent the device from over - shooting and damaging the fixture.
- When the crossbeam runs to the limit position, the limit device will be triggered and the device will stop running.
- The position of the limit device can be freely adjusted.



### Others

- It is equipped with a mini - printer that can quickly print test data reports.
- The emergency stop button of the device is prominent and reasonably positioned.


## Display Screen Interface

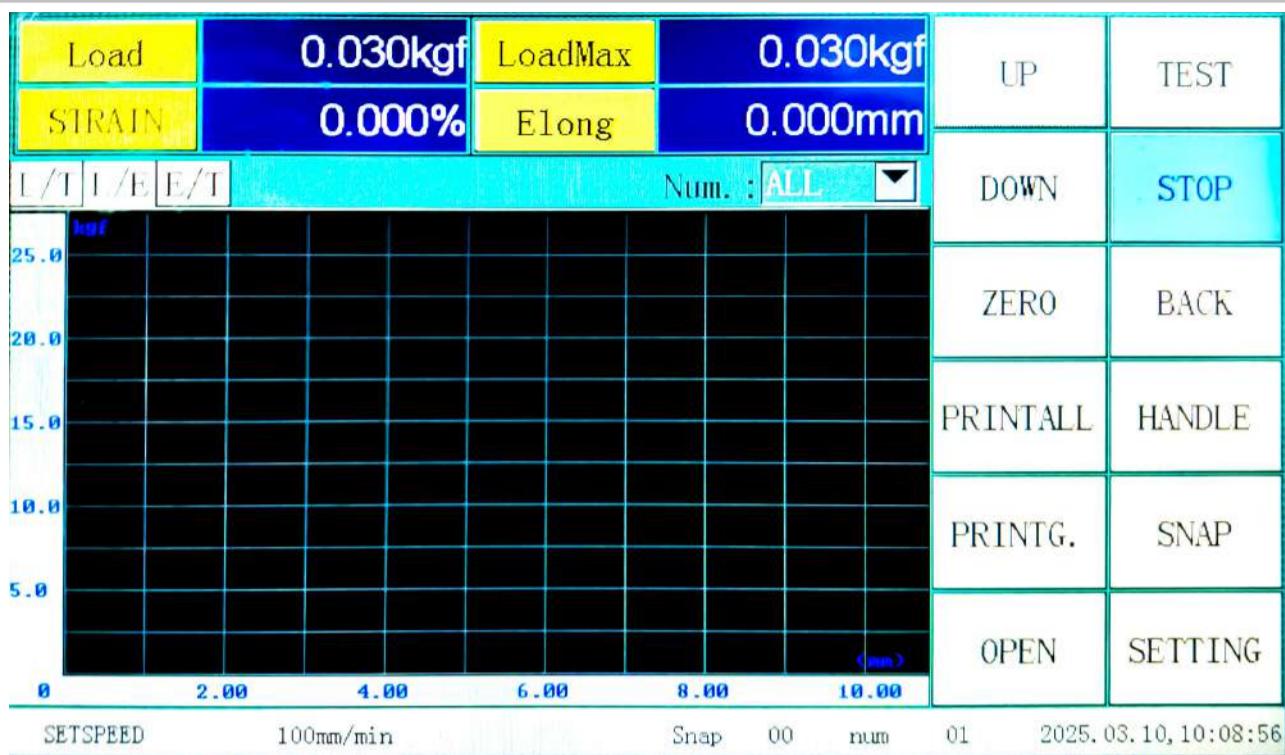

### Host Control

The display screen of this machine uses a touch - control method, which is simple and convenient to operate. On this interface, you can:


- Control the lifting of the machine and the start and stop of the experiment.
- Zero the test data and return the machine to its original position.
- View and print the test results.

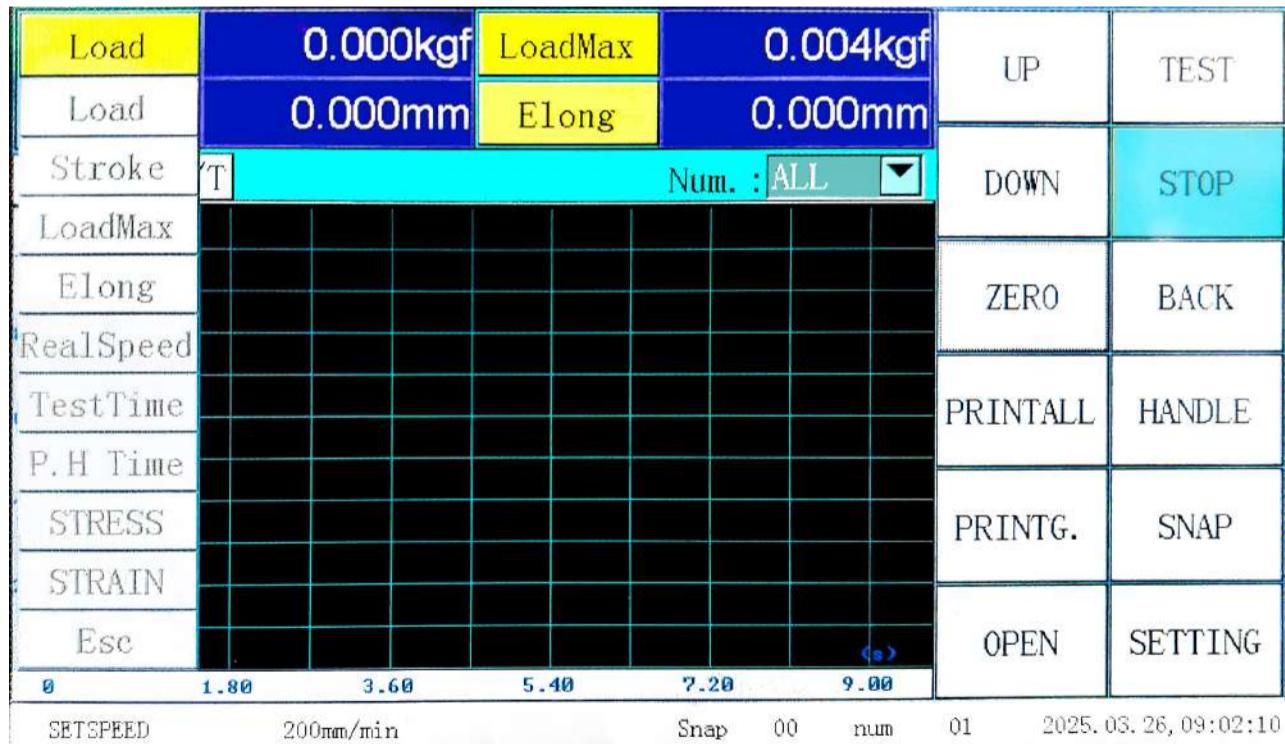

### Select Display Parameters


- Click the parameter section to select the parameters you want to display. The selectable parameters include: Load; Stroke; Load Max; Elong; Real Speed; Test Time; P.H Time; STRESS; SIRAIN

## Display Screen Interface

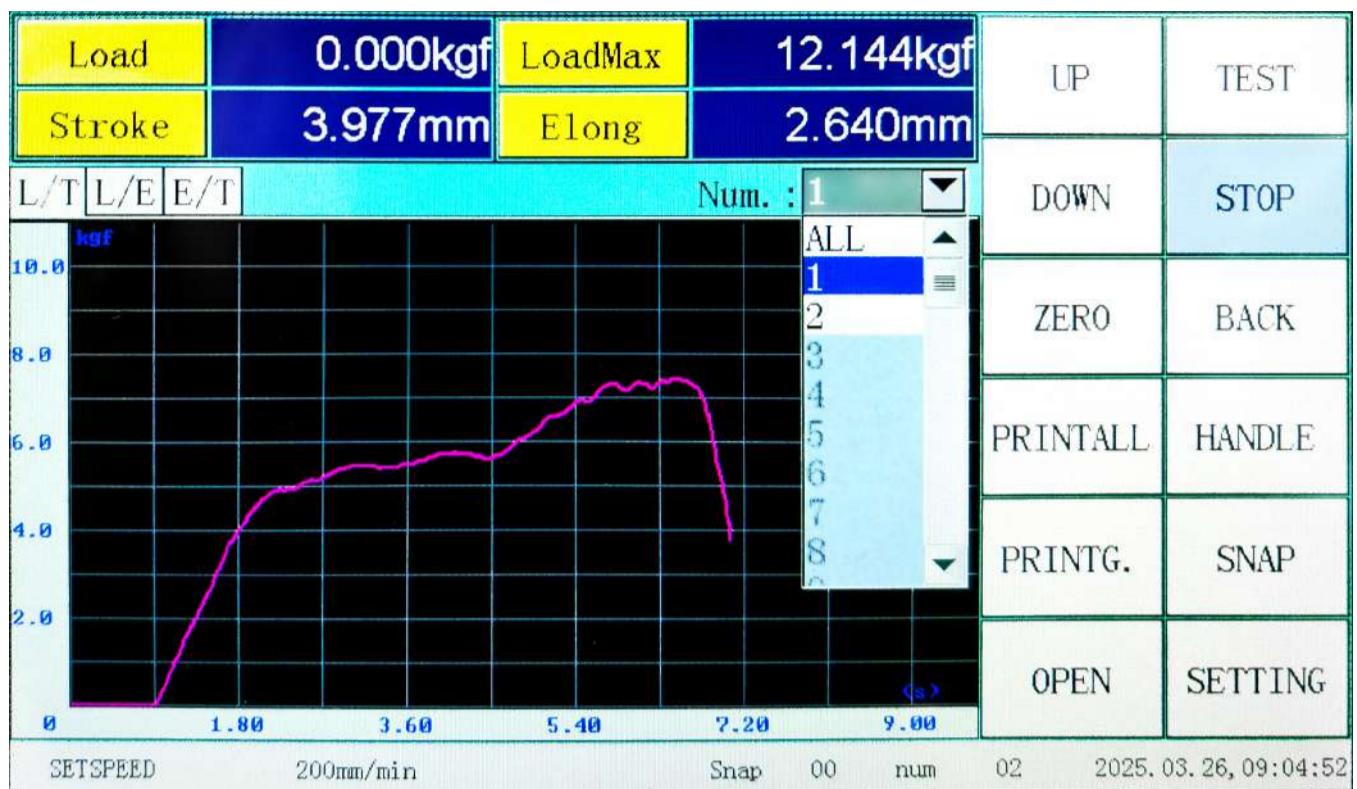

### Group and Curve Coordinate Selection

- After multiple groups of tests, click "Num" to select and view the curve chart corresponding to the according test group.
- 3 types of curve charts with coordinates, Force - Time (L/T); Force - Displacement (L/E); Displacement - Time (E/T). Click the corresponding button to switch.

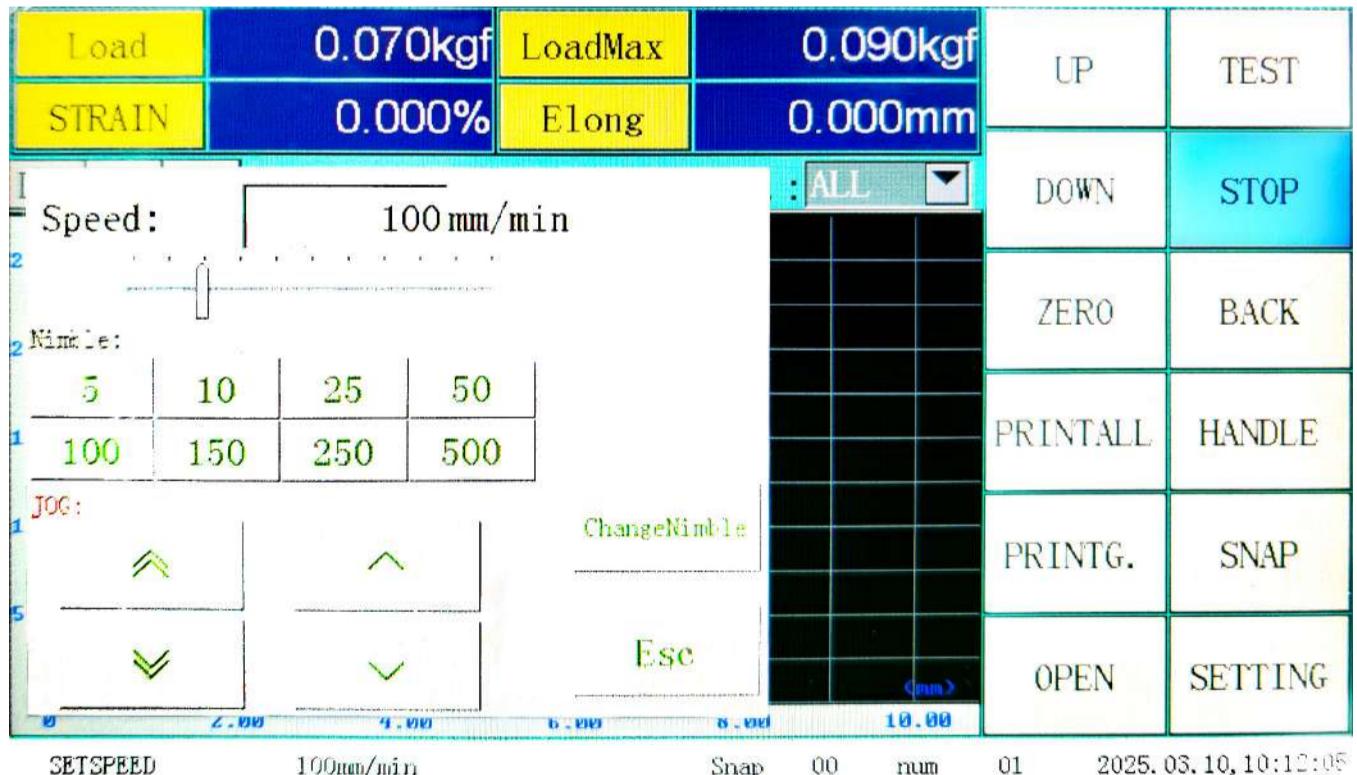

### Manual Control Parameter Setting

- On this interface, you can adjust the lifting speed of manual control. Users can directly select the required speed in "Nimble" or adjust the speed by sliding the slider.

# Display Screen Interface

1. Sample Num:	1	Sample	
2. Sample Shape:	<input style="width: 100px; height: 20px; border: 1px solid black; border-radius: 5px; padding: 2px 10px;" type="button" value="Square"/> <input style="width: 100px; height: 20px; border: 1px solid black; border-radius: 5px; padding: 2px 10px;" type="button" value="Circular"/> <input style="width: 100px; height: 20px; border: 1px solid black; border-radius: 5px; padding: 2px 10px; background-color: #0070C0; color: white;" type="button" value="Square"/>	Scheme	
No.	Gauge (mm)	Thickness (mm)	Result
1	10.000	5.000	CurveSet
			Unit
			About
			CALI.
			TEST_INF

## Sample Information

- Set the number and shape of the specimens to be tested.

1. TestSpssd:	50	mm/min	<input type="checkbox"/> Use PreSpeed	Sample
2. Test Dir. :	UP	mm/min	10	Scheme
3. A. StopTest:	BreakJudge	PreLoad:		Result
Break S. :	LoadReach	0.1	0.500kgf	CurveSet
	ElongReach	%		Unit
	BreakJudge			Method
<input checked="" type="checkbox"/> AutoStopAtBreak	Break S.0	%		About
4. Break Judge:	0.1	%Range	Supply1	CALI.
5. Cal. Elong:	0.1	kgf	Supply2	TEST_INF

## Test Scheme

- Set the test speed.
- Select the test direction, upward or downward.
- Set the stop conditions.
- Set the break - point judgment.
- Set the conditions for starting to measure deformation.

## Display Screen Interface

1. FilterCo:	1	Sample
2. BreakClearN.:	0	Scheme
3. Zero:	ZeroAll	Result
4. LoadDir:	Abs.	CurveSet
5. ElongDir.:	Abs.	Unit
6. StrokeDir:	Abs.	Method
7. ElongSensor:	Stroke	About
8. LoadSensor:	500.00kgf	Supply1 CALI.
		Supply2 TEST_INF

### Parameter Control

- Select the mode of the "Zero" button on the test main interface, with options of "Full Zero" and "Force Zero".
- Select the directions of deformation, force value, and displacement, with options of "Reverse", "Not Reverse", and "Absolute Value".
- Select the deformation sensor, with options of "Displacement", "Rubber Extensometer (optional)", and "Metal Extensometer (optional)".
- Select the force sensor.

1. LoadProtect:	100	%Range	<input checked="" type="checkbox"/> BeepOn	Sample
2. ElongProtect:	99999	mm	<input checked="" type="checkbox"/> BeepON_Limited	Scheme
3. HighSpeed:	60	%MaxSpeed	<input type="checkbox"/> AutoReturn	Result
4. LowSpeed:	10	%MaxSpeed	<input type="checkbox"/> AutoZeroForce	CurveSet
5. ReturnSpeed:	200	mm/min	<input type="checkbox"/> AutoZeroElong	Unit
6. ReturnDecCoe.:	10		<input type="checkbox"/> AutoZeroStroke	Method
7. ReturnDelay:	1.2	s	<input type="checkbox"/> ClosedloopS.	About
8. ScreenSaver:	0	min	<input type="checkbox"/> ShowMaxload	Supply1 CALI.
9. Language:	English		<input type="checkbox"/> onPCmode	Supply2 TEST_INF
10. Return Mode:	Zero			

### Parameter Control

- Protection settings, including force value protection and deformation protection. You can set the protection parameters as needed.
- Set the return speed, waiting time, and deceleration coefficient. The deceleration coefficient is used to prevent displacement over - shoot.
- Set the number of decimal places displayed for the force value.
- Switch the language display, with options of "English", "Chinese", and other languages available upon customization.
- Select the return method, with options of "Displacement Zero Point" and "Limit Position".
- Beep when touching the screen or triggering the limit.
- Automatically zero the displacement, force value, and deformation before the test, and automatically return to the original position after the test.

## Display Screen Interface

<input type="checkbox"/> LoadMax	<input type="checkbox"/> Max Strip	<input type="checkbox"/> Print Curve	Sample
<input checked="" type="checkbox"/> Elong of MaxL	<input type="checkbox"/> Min Strip		Scheme
<input type="checkbox"/> MaxElong	<input type="checkbox"/> Avg Strip		Result
<input type="checkbox"/> ElongRate_Max	<input type="checkbox"/> Str. Strip		CurveSet
<input type="checkbox"/> MaxElongRate			Unit
<input type="checkbox"/> Fracture. L			About
<input type="checkbox"/> Str.			ResultC.
<input type="checkbox"/> Glue St.			CALI.
<input type="checkbox"/> Tear St.			AutoSnap
<input type="checkbox"/> Elastic Coe.			TEST_INF

### Test Result Selection

- Select the desired test results. The checked items will be displayed in the report.

1. LoadStart:	5	% (25.00kgf)	Sample
2. ElongStart	10	mm	Scheme
3. TimeStart:	9	s	Result
4. StressStart:	10	MPa	CurveSet
5. StressStart:	10	%	Unit
<input type="checkbox"/> Show Stress/Strain			About
			CALI.
			TEST_INF

### Curve Settings

Set the starting parameters of the curve.

# Display Screen Interface


	Unit	Accuracy	Sample
1. Load:	kgf	3	Scheme
2. Elong:	mm	3	Result
3. Time:	s	0	CurveSet
4. Speed:	mm/min	1	Unit
5. Str.:	MPa	2	About
6. Tear&StripStr:	N/mm	2	CALI.

## Units and Precision

- There are multiple different units available for each parameter.
- Precision represents the number of decimal places.


<b>Load</b>	kgf, N, lbf, gf, KN, t
<b>Elong</b>	mm, cm, inch
<b>Time</b>	s, min, h
<b>Speed</b>	mm/min, mm/s, cm/min, cm/s, in/min, in/s
<b>Str</b>	MPa; kPa; kgf/mm <sup>2</sup> ; kgf/cm <sup>2</sup> ; N/mm <sup>2</sup> ; N/cm <sup>2</sup> ; N/m <sup>2</sup> ; gf/mm <sup>2</sup> ; gf/cm <sup>2</sup> ; psi; lbf/in <sup>2</sup>
<b>Tear/StripStr</b>	N/mm; N/cm; N/m; kN/m; kgf/mm; kgf/cm; kgf/m; gf/mm; gf/cm; lbf/in; klf/in

# Mikrosizer Software Interface

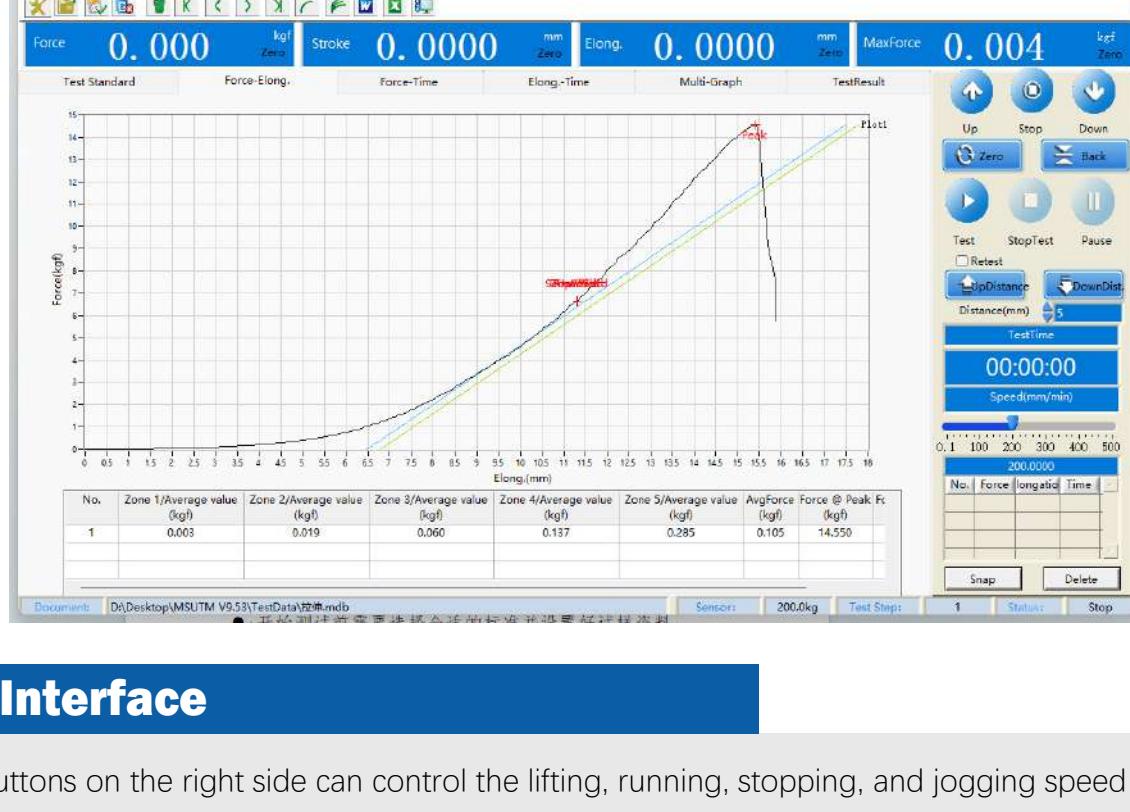


## Main Interface

- The buttons on the right side can control the lifting, running, stopping, and jogging speed of the host.
- The upper part displays four parameters: force value, displacement, deformation, and maximum force. You can click the item name to select the item to be displayed, such as stress, strain, elongation rate, speed, etc.

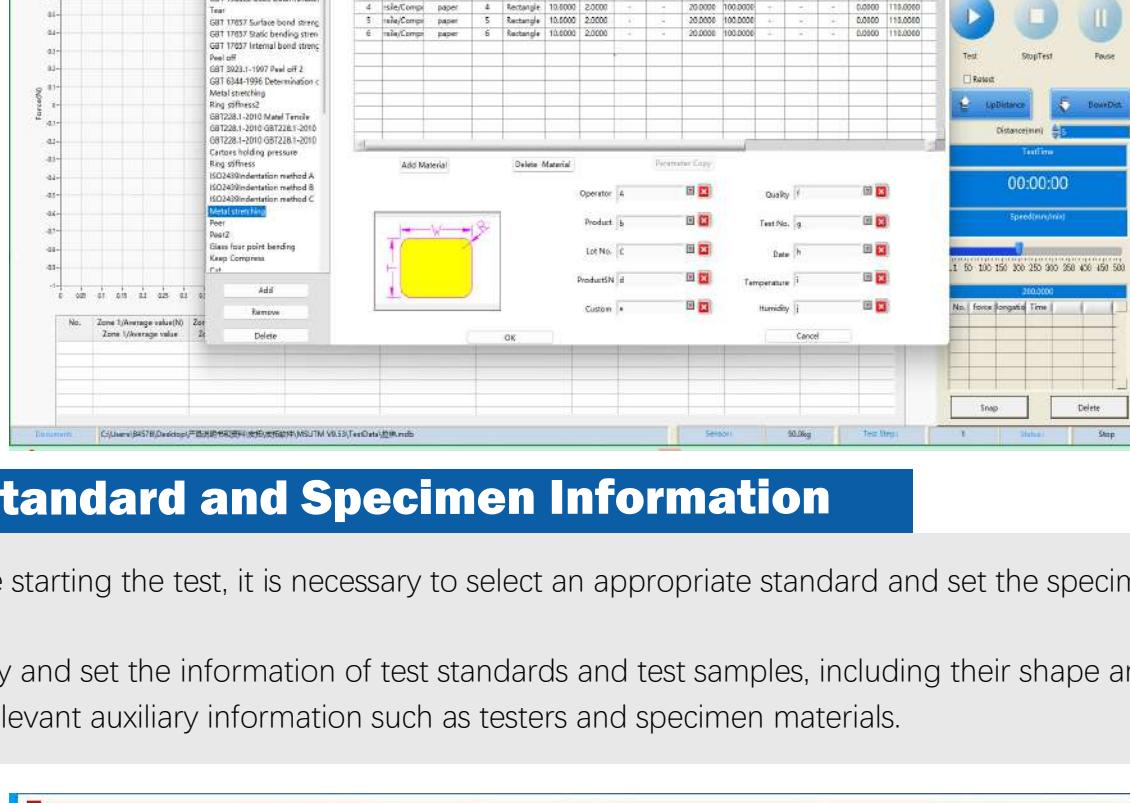


## Test Standard and Specimen Information

- Before starting the test, it is necessary to select an appropriate standard and set the specimen information.
- Display and set the information of test standards and test samples, including their shape and size, as well as relevant auxiliary information such as testers and specimen materials.

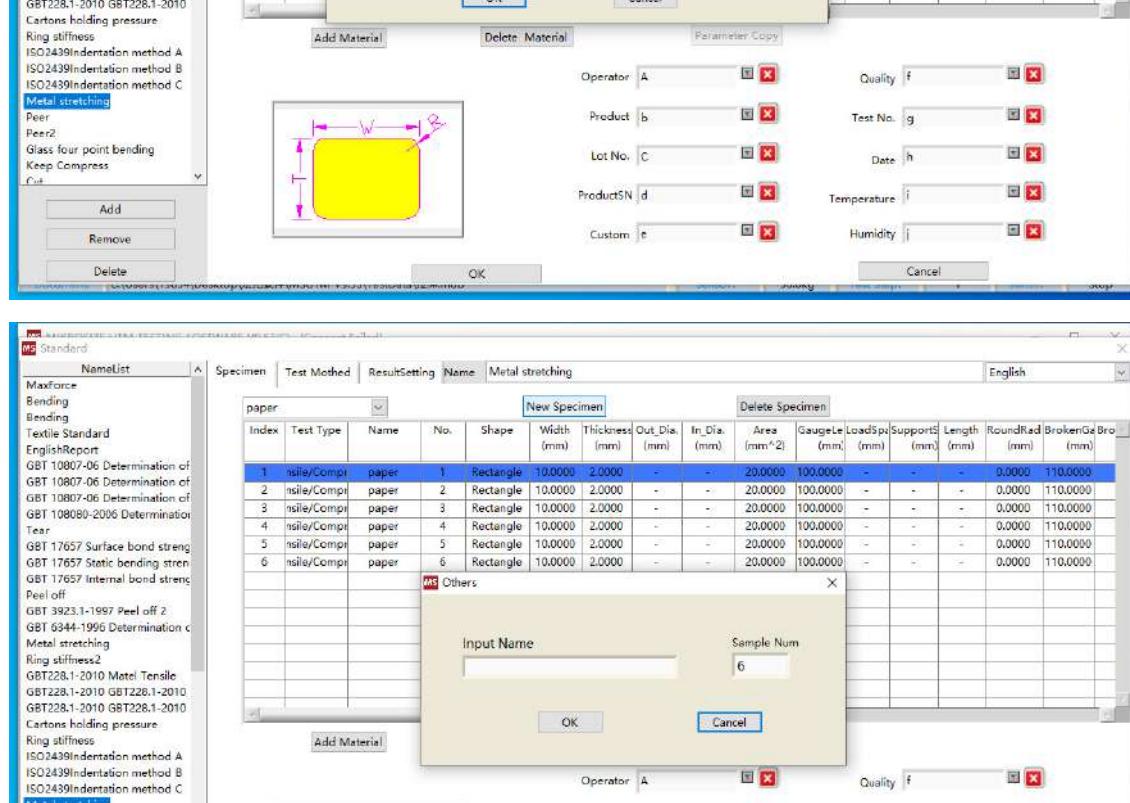

- It is possible to add or delete test standards and specimen information.


# Mikrosize Software Interface

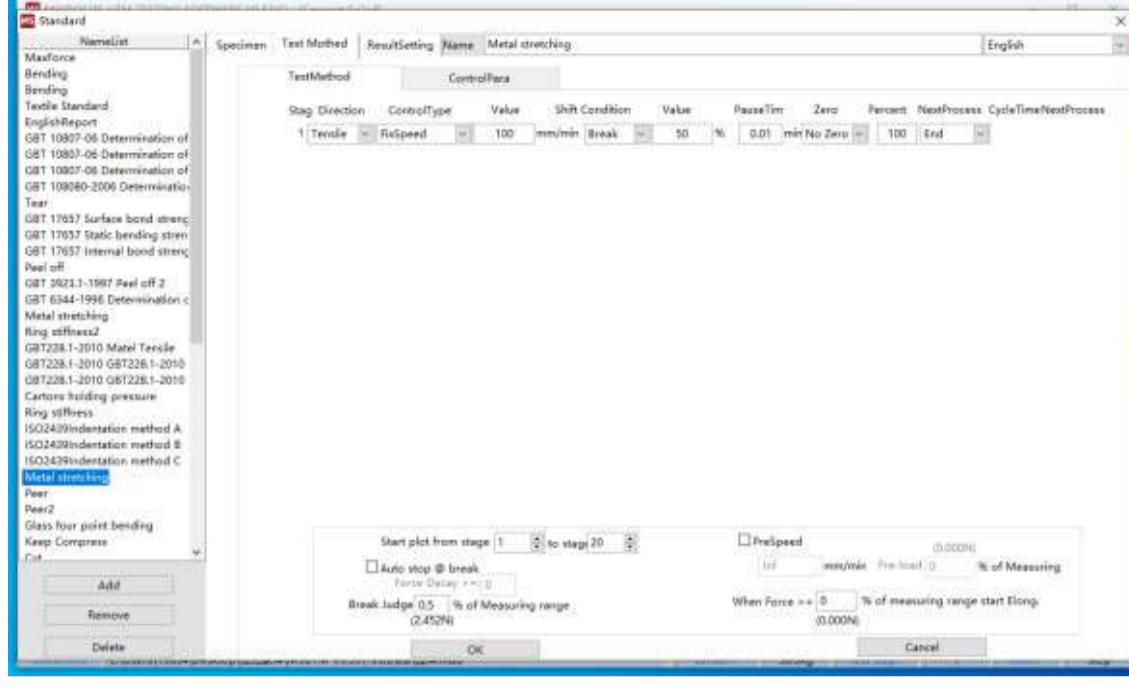

## Test Method and Parameter Control


### Test Method

- After selecting the test standard, you can edit the test method. For example, for the tensile standard test method: set the test speed; choose the control mode such as constant deformation, constant speed, or constant stress.
- Also, set the stop conditions, like break point, yield point, or when parameters such as deformation, force, or strain reach the set values.

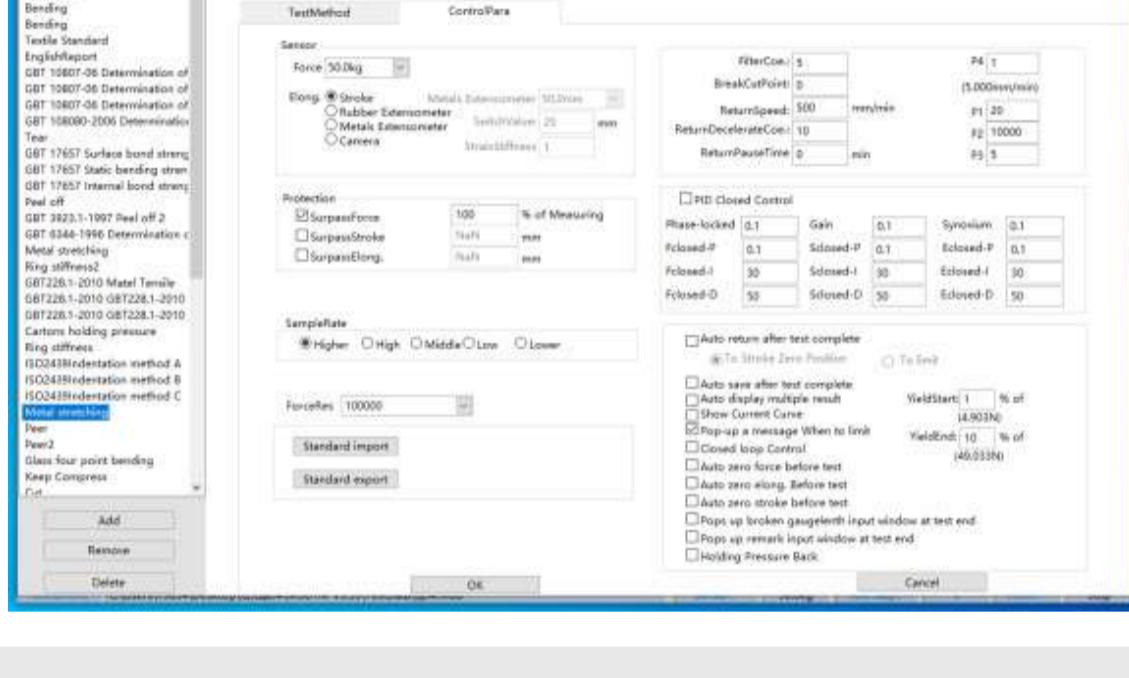

### Parameter Control


- Set parameters related to sensors, extension meters, force value resolution, and system control.

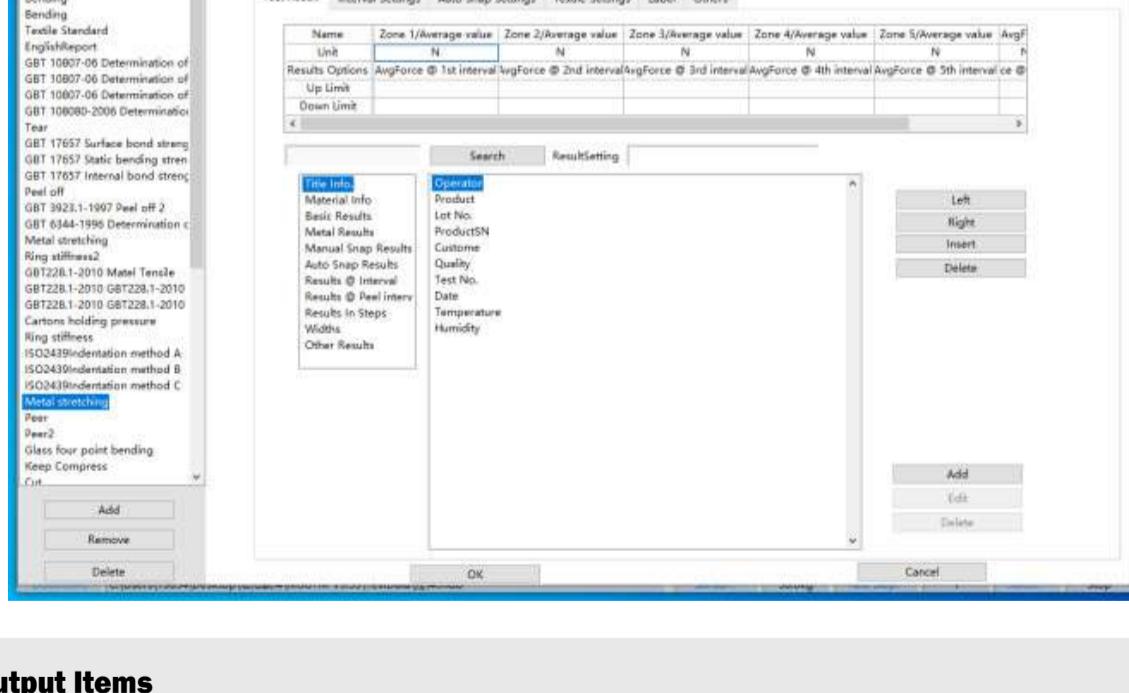

### Select Output Items


- The software classifies all test results into 11 categories for easy retrieval by customers. Users can also customize relevant test results.
- The added items will be displayed in the test report, allowing users to focus on the specific data they need.

# Mikrosize Software Interface

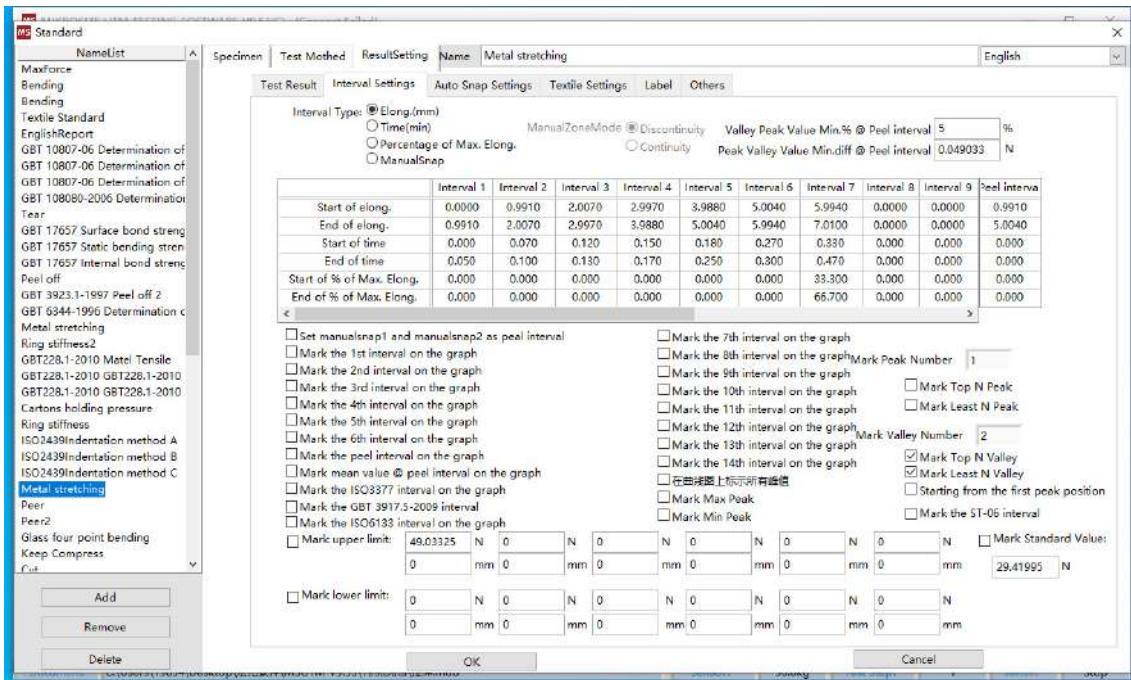

## Interval Settings


- It supports three modes of dividing intervals: deformation, time, and deformation percentage.

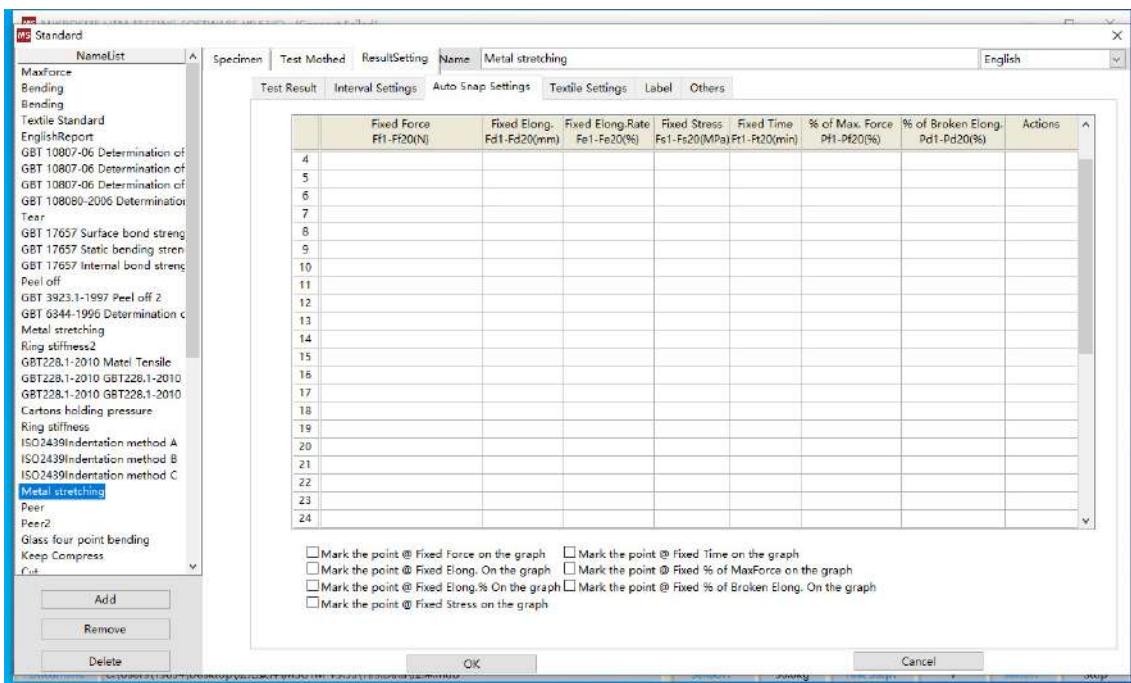

## Auto - Point Selection


- Supports 7 point - selection modes: fixed - force point selection, fixed - deformation point selection, fixed - elongation - rate point selection, fixed - stress point selection, fixed - time point selection, percentage - of - maximum - force point selection, and percentage - of - fracture - deformation

# Mikrosize Software Interface

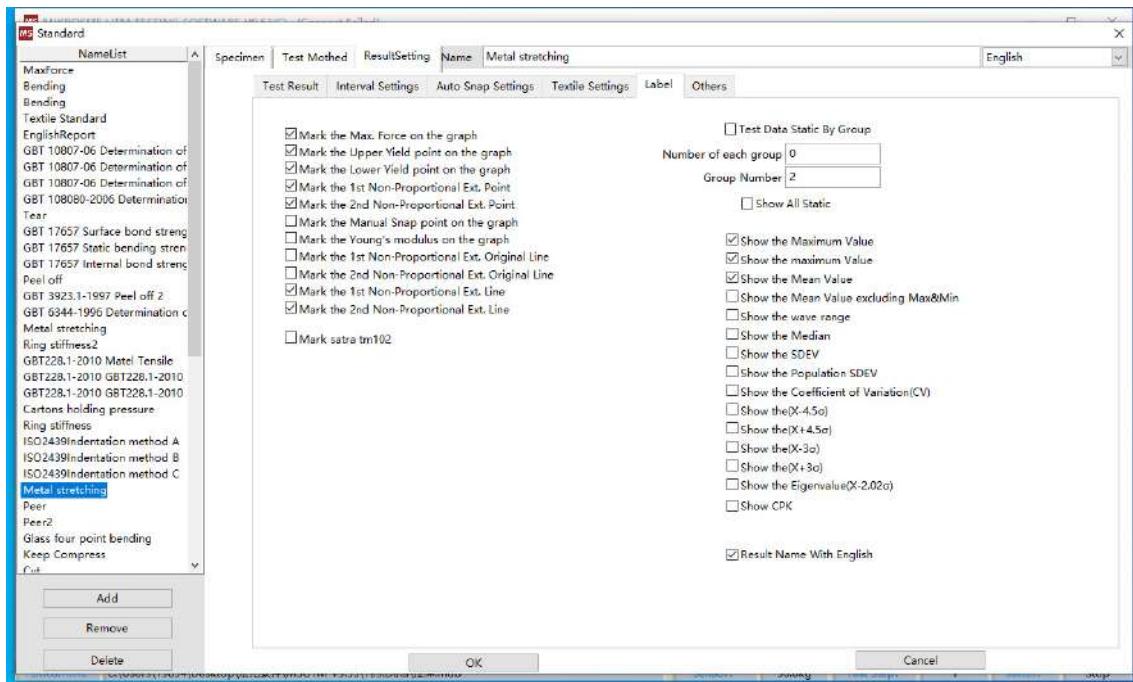

## Marking


- Used to set the marking of various characteristic points on the curve, as well as whether to display statistical values such as the maximum value and the average value in the test results.

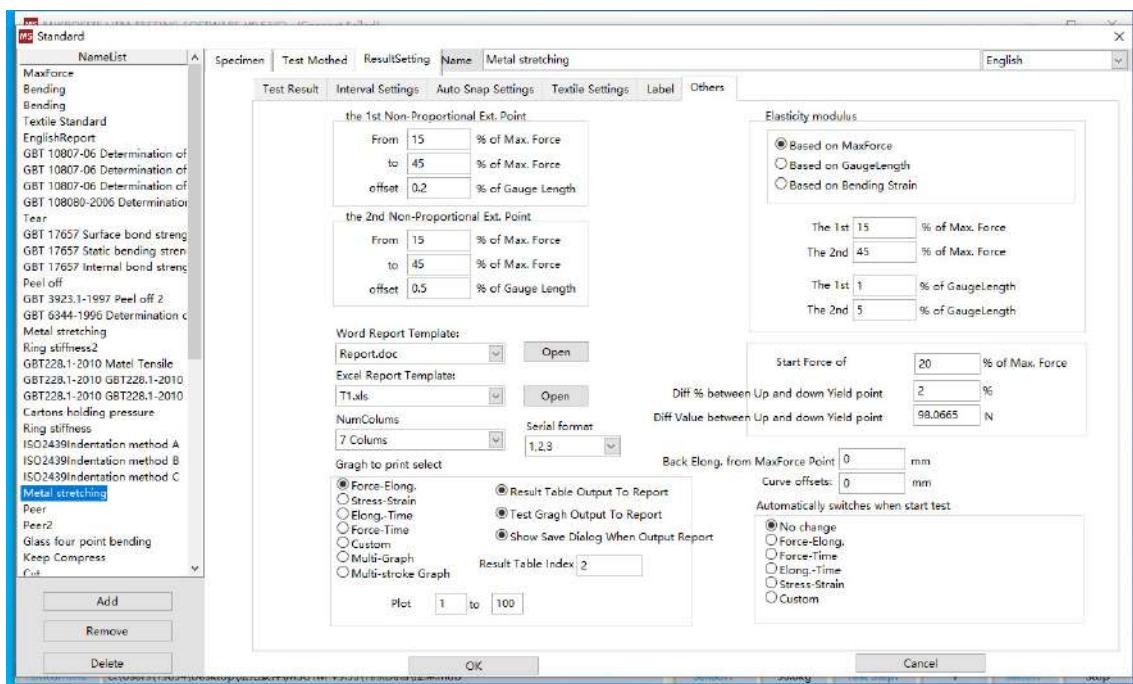

## Others


- Also, make report - related settings, such as the Word and Excel report templates, the selection of graphs to be printed in the report, and whether to output the test result table and graphs in the report.

# Mikrosize Software Interface

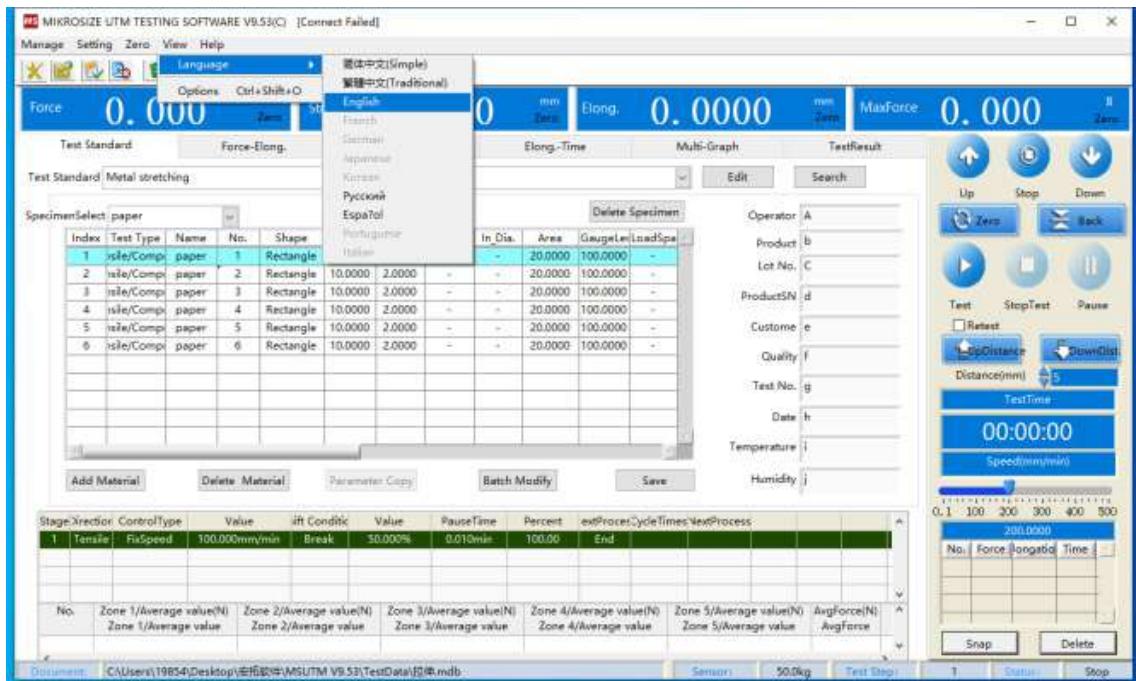

## Language Selection


- Supports multiple languages
- Can be customized according to customer requirements.

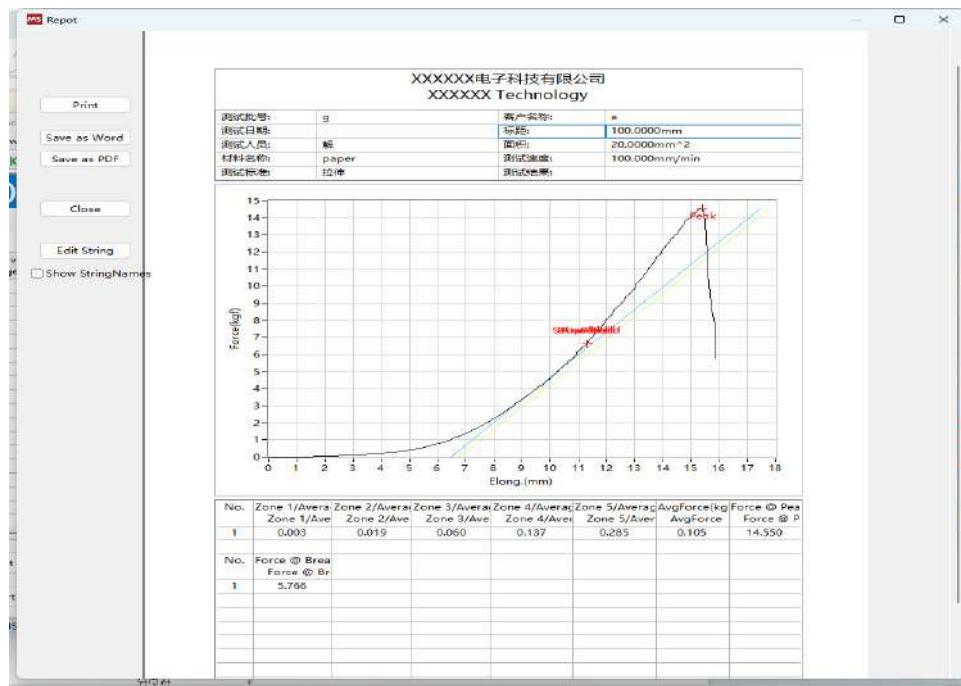


## Report Output

- The software comes with a simple result report, and users can edit the report.
- The output formats are PDF and Word. Users can also choose to output the report through the shortcuts on the top of the software, with options of Word and Excel.

# Mikrosize Software Interface

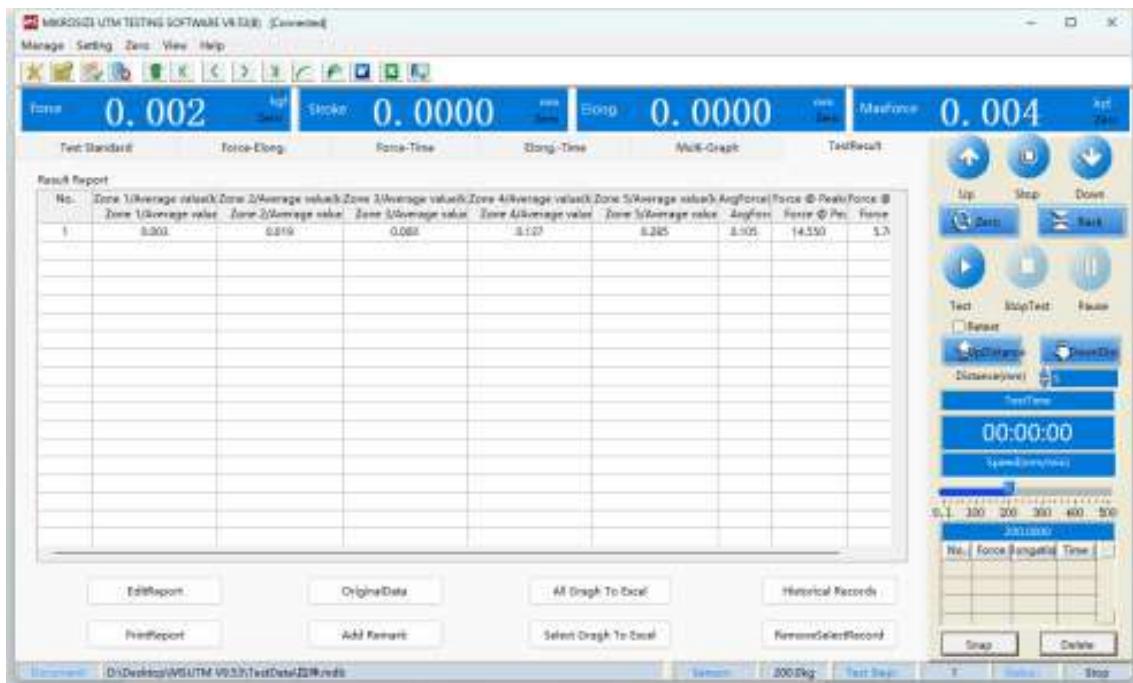

Test Results

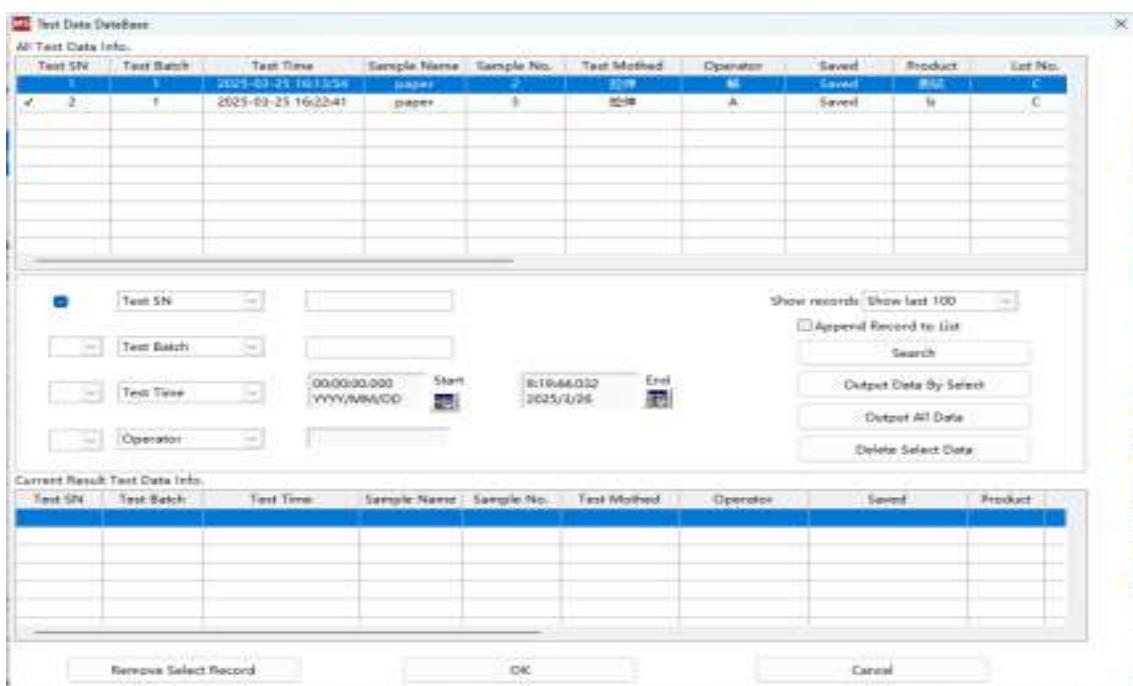


Historical Data

## Data Viewing and Searching

- After the test is completed, view the test data and results on this interface.
- "All Test Data Info" displays all the test data - related information saved in the file, facilitating customers to query and retrieve the data in the file.
- Users can also query the corresponding test data according to the test time, number of times, batch, material, standard, etc., and output the test result report based on the query results.
- "Current Result Test Data Info" shows the test information corresponding to the current output result.

# Mikrosize Software Interface

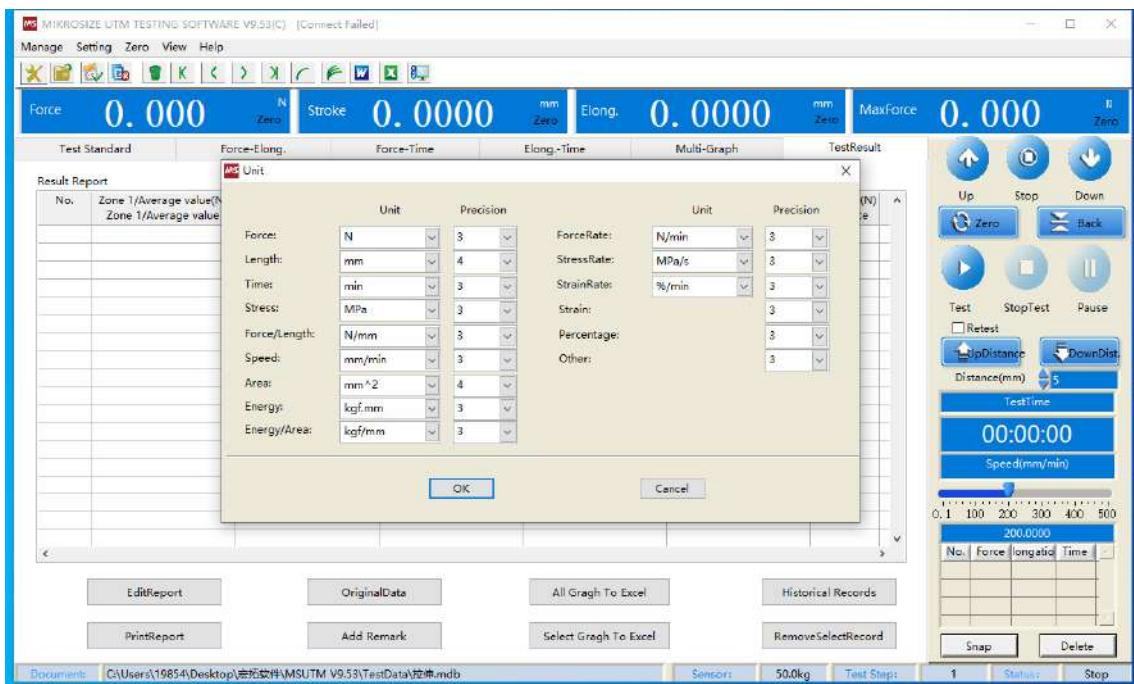


## Units

- There are multiple different units available for each parameter.
- Precision represents the number of decimal places.
- The parameter units determine the unit system of the entire system, and all parameter operations are performed based on this unit system.

<b>Force</b>	gf, kgf, N, kN, tf(SI), lbf, tf(long), tf(short), ozf, cN, mN
<b>Length</b>	mm, cm, m, in, km, μm
<b>Time</b>	s, min, h
<b>Stress</b>	Pa, kPa, MPa, GPa, kN/m^2, N/m^2, N/cm^2, N/mm^2, kgf/m^2, kgf/cm^2, kgf/mm^2, gf/cm^2, gf/mm^2, psi, kpsi, lbf/in^2, lbf/ft^2, gf/in^2, gf/m^2
<b>Force/Length</b>	N/mm, N/cm, N/m, kgf/mm, kgf/cm, kgf/m, gf/mm, gf/cm, kN/m, lbf/in, gf/in, kgf/in, pli, kN/mm, N/in
<b>Speed</b>	mm/min, mm/s, cm/min, cm/s, in/min, in/s
<b>Area</b>	mm^2, cm^2, m^2, in^2, ft^2
<b>Energy</b>	kgf.mm, kgf.cm, kgf.m, N.mm, N.cm, N.m, lbf.in, J, kJ, cal, kcal, gf.mm, gf.cm, gf.m
<b>Energy/Area</b>	gf/mm, gf/cm, kN/m, lbf/in, gf/in, kgf/in, pli

# Mikrosize Software Interface

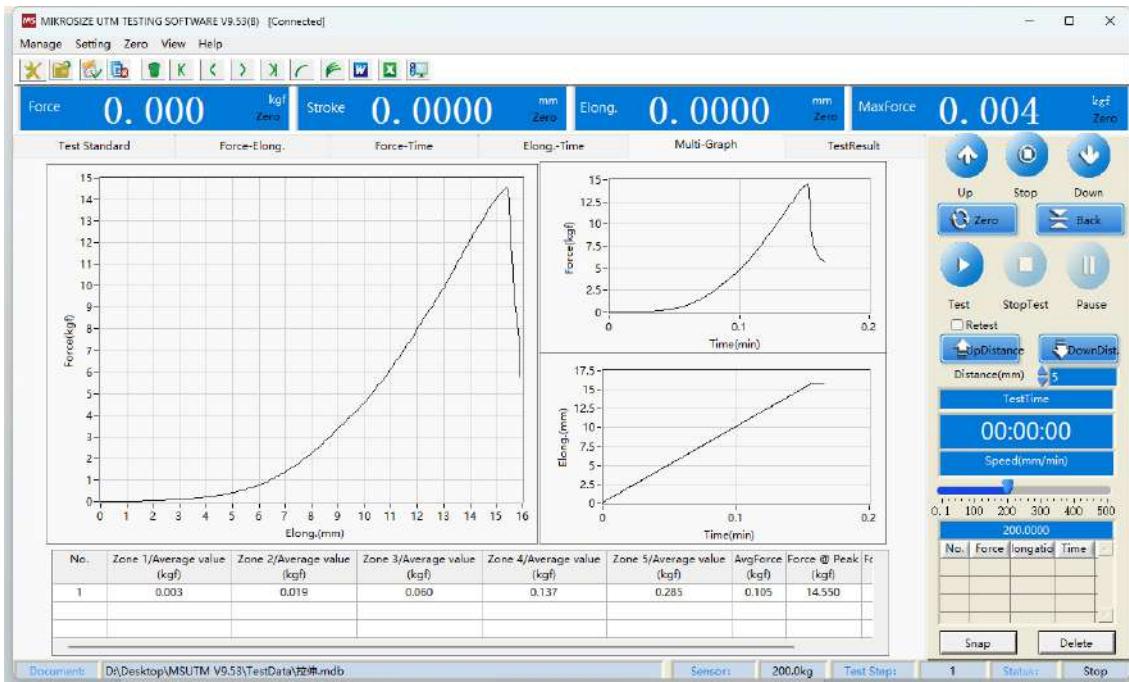

## Multi - Graph

- Supports the multi - graph mode, allowing users to view three different - axis curves of the same test simultaneously. This is convenient and intuitive, avoiding the need to switch back and forth.

# Technical Specifications

Model	UTM-TDC								
Name	Single Column Electronic Universal Testing Machine								
Subdivision Model	UTM-TSC-5	UTM-TSC-10	UTM-TSC-20	UTM-TSC-50	UTM-TSC-100	UTM-TSC-200	UTM-TSC-500	UTM-TSC-1000	
Capacity	KN	0.05	0.1	0.2	0.5	1	2	5	10
	KG	5	10	20	50	100	200	500	1000
	lb	11	22	44	110	220	440	1102	2204
Testing Machine Class	Class 1								
Force Unit	g、Kg、lb、N、KN								
Displacement Unit	Inch、cm、mm								
Effective Test Force	0.4%~100%FS								
Force Accuracy	Within $\pm 1\%$ of Indication Value								
Force Resolution	1/300000								
Displacement Accuracy	Within $\pm 1\%$ of Indication Value								
Displacement Resolution	0.001mm								
Deformation Measurement Range	2%~100%FS								
Deformation Indication Accuracy	Within $\pm 1\%$ of the indicated value								
Maximum Test Speed	500mm/min (Optional 1000mm/min)								
Minimum Test Speed	0.1mm/min								
Speed Accuracy	Within $\pm 1\%$ of the indicated value								
Crossbeam Stroke	No - fixture test stroke: 920mm								
Fixture Configuration	Configured according to customer requirements								
Return Method	Manual, Automatic								
Stop Method	1. Automatically stop at the maximum fracture value 2. Stop when the upper and lower limit safety settings are reached								
Safety Device	1. Mechanical travel switch protection 2. Emergency stop switch for emergency braking								
Overload Protection	When reaching 100% of the maximum load, the machine automatically stops for protection								
Power Supply Voltage	220V.AC/50Hz (Can be selected as 110V.AC/60Hz according to the country)								
Machine Size/Weight	L*W*H:500mm*350mm*1160mm About50kg								
Packaging Size/Weight	L*W*H:550mm*500mm*1400mm About73KG								



# Standard Delivery

Name	Quantity	
Machine Mainframe	1	
Tensile Fixture	1	
Power Cord	1	
Horizontal Adjusting Feet	4	
Instruction Manual	1	
Warranty Card	1	
Product Certificate	1	



## Optional Delivery

### Optional Delivery

---

Small deformed extensometers

---

Large deformation extensometer

---

Mini printer

---

Testing Software

---

Other types or customized fixtures

---

Computer

---